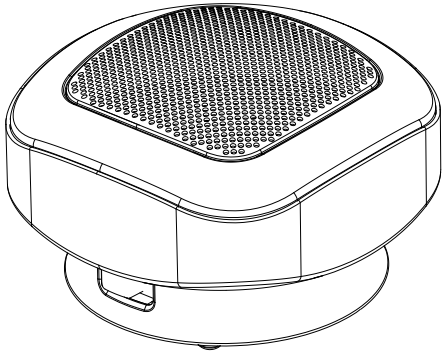

GD67
Portable Speaker
User Manual

Getting Started:

Remove speaker from packaging.

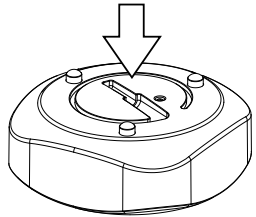

Press down on the base of the speaker to release the extension base.

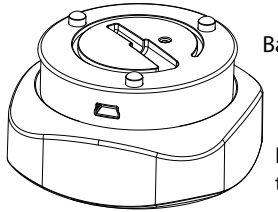

Base “pops up”

Press the base down again to collapse the base.

Charging:

Fully charge the Portable speaker before use.
Connect the speaker to the PC via the provided USB cable.

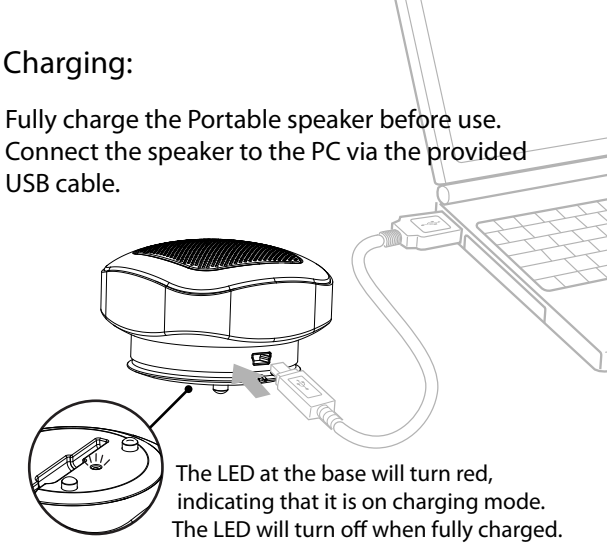

The LED at the base will turn red, indicating that it is on charging mode.
The LED will turn off when fully charged.